


SmartGen

MAKING CONTROL SMARTER

RPU560A

REDUNDANT PROTECTION UNIT

USER MANUAL

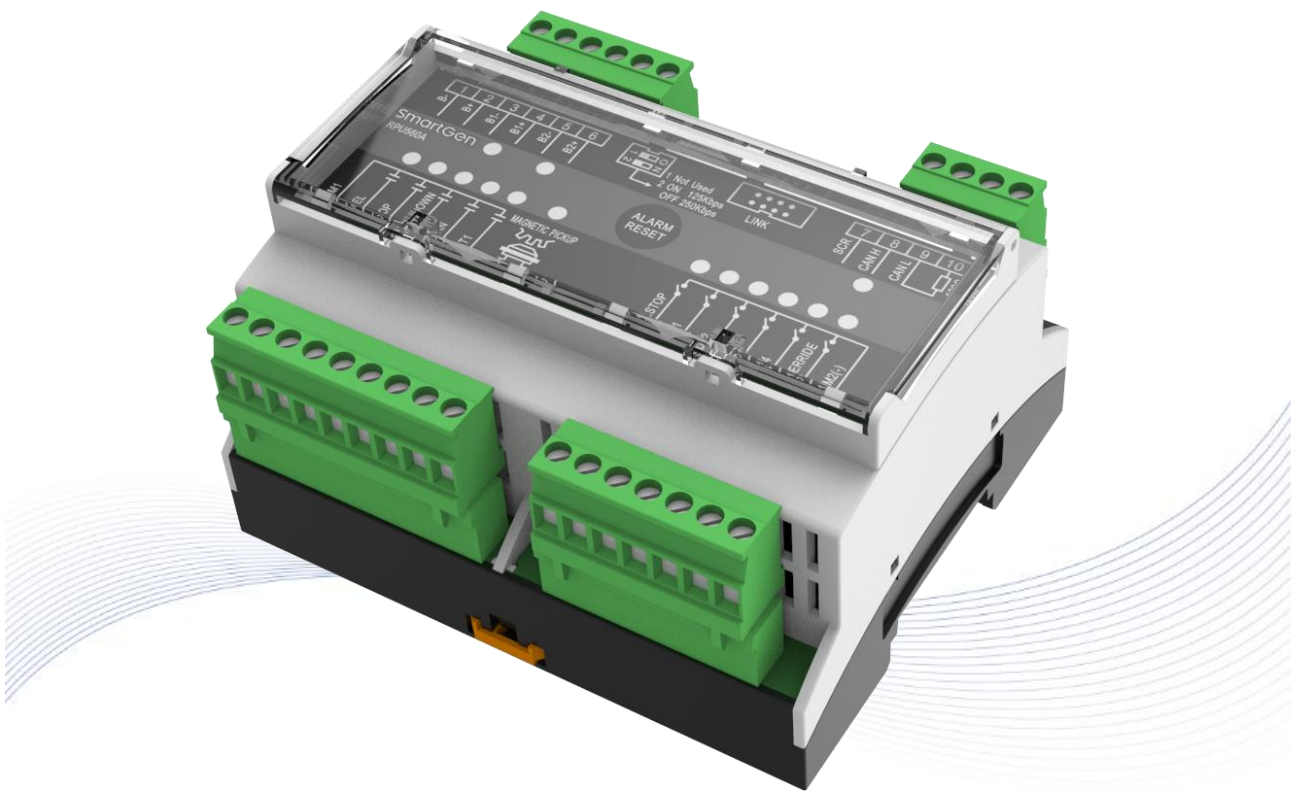

郑州众智科技股份有限公司
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

SmartGen 众智 Chinese trademark

SmartGen English trademark

SmartGen – make your generator *smart*

SmartGen Technology Co., Ltd.

No.28 Jinsuo Road, Zhengzhou, Henan Province, China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: www.smartgen.com.cn/

www.smartgen.cn/

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to Smartgen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies.




Smartgen Technology reserves the right to change the contents of this document without prior notice.

Table 1 Software Version

Date	Version	Note
2015-08-10	1.0	Original Release
2015-12-15	1.1	Change the name <i>Security Module</i> to <i>Redundant Protection Unit</i>
2021-08-15	1.2	Add the emergency stop break wire detection, and change the voltage input description of power supply.
2022-10-10	1.3	Update company logo and manual format.

This manual is suitable for RPU560A redundant protection unit only.

Table 2 Notation Clarification

Sign	Instruction
 NOTE	Highlights an essential element of a procedure to ensure correctness.
 CAUTION!	Indicates a procedure or practice, which, if not strictly observed, could result in damage or destruction of equipment.
 WARNING!	Indicates a procedure or practice, which could result in injury to personnel or loss of life if not followed correctly.

SmartGen

CONTENTS

1	OVERVIEW.....	5
2	PERFORMANCE AND CHARACTERISTICS.....	5
3	TECHNICAL PARAMETERS.....	5
4	OPERATION.....	6
4.1	MAIN PROTECTED MODE.....	6
4.2	STANDBY PROTECTED MODE.....	6
5	PROTECTION.....	7
5.1	WARNINGS.....	7
5.2	SHUTDOWN ALARM.....	7
6	PARAMETER CONFIGURATION.....	8
7	OUTPUT PORT FUNCTION DEFINITION.....	9
8	TERMINAL CONNECTIONS.....	10
9	SYSTEM CONNECTION DIAGRAM.....	12
10	APPLICATION DIAGRAM.....	12
11	INSTALLATION.....	13
12	TROUBLESHOOTING.....	13

SmartGen

1 OVERVIEW

RPU560A Redundant Protection Unit is a unit that can autonomously maintain and protect the engine running. The module is connected to HMC9000/HMC6000 via CANBUS port. All parameters and shutdown alarm types can be checked on the master controller. It can be widely used in marine emergency units, main propulsion units, main generator units and pumping units.

2 PERFORMANCE AND CHARACTERISTICS

- Speed sensor enables accurate control and protection of the running engine;
- Optional working mode; one is synchronized with master controller to protect engine normal running; the other is protect engine automatically when master controller failure occurs.
- 4 digital shutdown inputs;
- 5 relay outputs: shutdown output, fuel output, common warning output, common shutdown output, auxiliary output;
- Emergency shutdown input port: after emergency shutdown is initiated, regardless of whether master controller failure occurred or not, shutdown signal will still be sent;
- Override mode, in which only overspeed shutdown and emergency shutdown signals will be able to stop the unit;
- Modular design, compact structure, small size and easy use.

3 TECHNICAL PARAMETERS

Table 3 Technical Parameters

Item	Details
Working Voltage	DC18.0V~DC35.0V
Power Consumption	<2.5W
Shutdown Output	7A relay output, break wire detection function
Fuel Output	16A relay output, break wire detection function
Common Warning Output	7A relay output
Common Shutdown Output	7A relay output
Auxiliary Output	7A relay output
Case Dimension	107.6mm x 89.7mm x 60.7mm
Working Temperature	(-25~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-30~+80)°C
Weight	0.27kg

4 OPERATION

4.1 MAIN PROTECTED MODE

RPU560A redundant protection unit will detect engine parameters and shutdown inputs automatically to protect the engine in real time whether the main module is active or not. If overspeed shutdown or other shutdown alarm input is occurred, the stop relay is energized while the fuel relay is disengaged, then the common shutdown relay is engaged. When the engine stops successfully, users can reset the alarm by pressing reset button mounted on the HMC9000/HMC6000 panel or by pressing the reset button contained within the RPU560A module.

4.2 STANDBY PROTECTED MODE

1. When master control is active (CANBUS communication is normal), if the engine speed has exceeded the fuel output speed, the fuel relay is energized. Only the active emergency shutdown input and overspeed signal will be able to stop the generator.
2. When master control is deactivated (CANBUS communication is failed), if overspeed shutdown or other shutdown signal is detected, the stop relay is energized while the fuel relay is disengaged, then the common shutdown relay is engaged. When the engine stops successfully, users can reset the alarm by pressing reset button.
3. In override mode, if master control is deactivated, only overspeed shutdown and emergency shutdown signals will be able to stop the unit.

5 PROTECTION

5.1 WARNINGS

When the warnings mentioned below are initiated, the alarm message will be displayed on LCD and the common relay is energized.

Warning types are as follows:

Table 4 Warnings

No.	Warning type	Detection range	Description
1	Battery 1 Over Volt	Always active	Active when the battery voltage has fallen below the pre-set threshold and last for 20s. Then lamp BAT.1, BAT.2 will blink and the common warn relay outputs at the same time.
2	Battery 2 Over Volt		
3	Battery 1 Under Volt		
4	Battery 2 Under Volt		
5	Input 1 BW Warn		When the controller detects wire disconnection, the disconnection indicators begin to blink and the common warn relay outputs, and the corresponding information will be displayed on the LCD screen.
6	Input 2 BW Warn		
7	Input 3 BW Warn		
8	Input 4 BW Warn		
9	Override input BW Warn		
10	Shutdown output BW Warn		
11	Fuel BW Warn		
12	Speed BW Warn		
13	EM. STOP Break Wire Warn		

5.2 SHUTDOWN ALARM

If shutdown alarm signal is detected, shutdown relay and common shutdown relay activate while fuel relay deactivates.

Table 5 Shutdown Alarms

No.	Alarm Type	Detection range	Description
1	Emergency Shutdown	Always active	After shutdown alarm signal is initiated, shutdown relay and common shutdown relay are activated while fuel relay deactivates. When failure shutdown is active, the corresponding lamp will be always initiated.
2	Input 1 Shutdown	Always active	When failure shutdown input is active and engine speed has exceeded or been equal with pre-set value, shutdown relay and common shutdown relay are activated while fuel relay deactivates. When failure shutdown is active, the corresponding lamp will be always initiated, and the controller possesses with break wire detection function (it can be defined by users).
3	Input 2 Shutdown		
4	Input 3 Shutdown		
5	Input 4 Shutdown		

6 PARAMETER CONFIGURATION

RPU560A redundant protection unit parameters can only be configured via PC software (the LINK port of RPU560A must be connected with SG72 transfer module and then connect with PC).

Table 6 Parameter Configuration


Parameter	Range	Factory default value
1. Input 1 Delay	(0-20.0)s	2.0s
2. Input 1 BW Detection	(0-1)	0: Not detect
3. Input 1 Alarm Speed	(0-200)%	0
4. Input 2 Delay	(0-20.0)s	2.0s
5. Input 2 BW Detection	(0-1)	0: Not detect
6. Input 2 Alarm Speed	(0-200)%	0
7. Input 3 Delay	(0-20.0)s	2.0s
8. Input 3 BW Detection	(0-1)	0: Not detect
9. Input 3 Alarm Speed	(0-200)%	0
10. Input 4 Delay	(0-20.0)s	2.0s
11. Input 4 BW Detection	(0-1)	0: Not detect
12. Input 4 Alarm Speed	(0-200)%	0
13. Override Input BW Detection	(0-1)	0: Not detect
14. EM. Stop BW Detection Enable	(0-1)	0: Not detect
15. Output 1 Set	(0-10)	1: Master Control Fail
16. Output 1 Type	(0-1)	0: Normally open
17. Flywheel Teeth	(10-300)	118
18. Rated Speed	(0-5999)r/min	1500 r/min
19. Fuel Output	(0-200)%	25%. The fuel relay is active when the speed has exceeded the default value while deactivated when the speed has fallen below the default value.
20. Over Speed Shut	(0-200)%	115%
21. Over Speed Delay	(0-3600)s	1s
22. Over Speed Warn	(0-200)%	110%
23. Over Speed Return	(0-200)%	108%
24. Battery Rated Volt	(0-60.0)V	24.0V
25. Battery 1 Over Volt Warn	(0-200)%	125%
26. Battery 2 Over Volt Warn	(0-200)%	125%
27. Battery 1 Under Volt Warn	(0-200)%	80%
28. Battery 2 Under Volt Warn	(0-200)%	80%
29. Work Mode	(0-1)	0: Main protected mode The RPU560A module will detect engine parameters and alarm information automatically to protect the engine in real time whether the master module is active or not. 1: Standby protected mode The RPU560A module will protect engine

Parameter	Range	Factory default value
		automatically when the master module is deactivated.

7 OUTPUT PORT FUNCTION DEFINITION

Table 7 Output Port Function Definition

No.	Contents	Description
0	Not Used	
1	Master Module Fail	Active when the master module is deactivated.
2	Main Battery Supply	Active when the main battery supply feed.
3	Standby Battery Supply	Active when the standby battery supply feed.
4	Common Alarm	Active when warning or shutdown alarm occurs.
5	Normal Running	Active when working normally; deactivated when fail.
6	Overspeed Shutdown	Active when overspeed shutdown occurs.
7	Reserved	
8	Reserved	
9	Reserved	
10	Reserved	

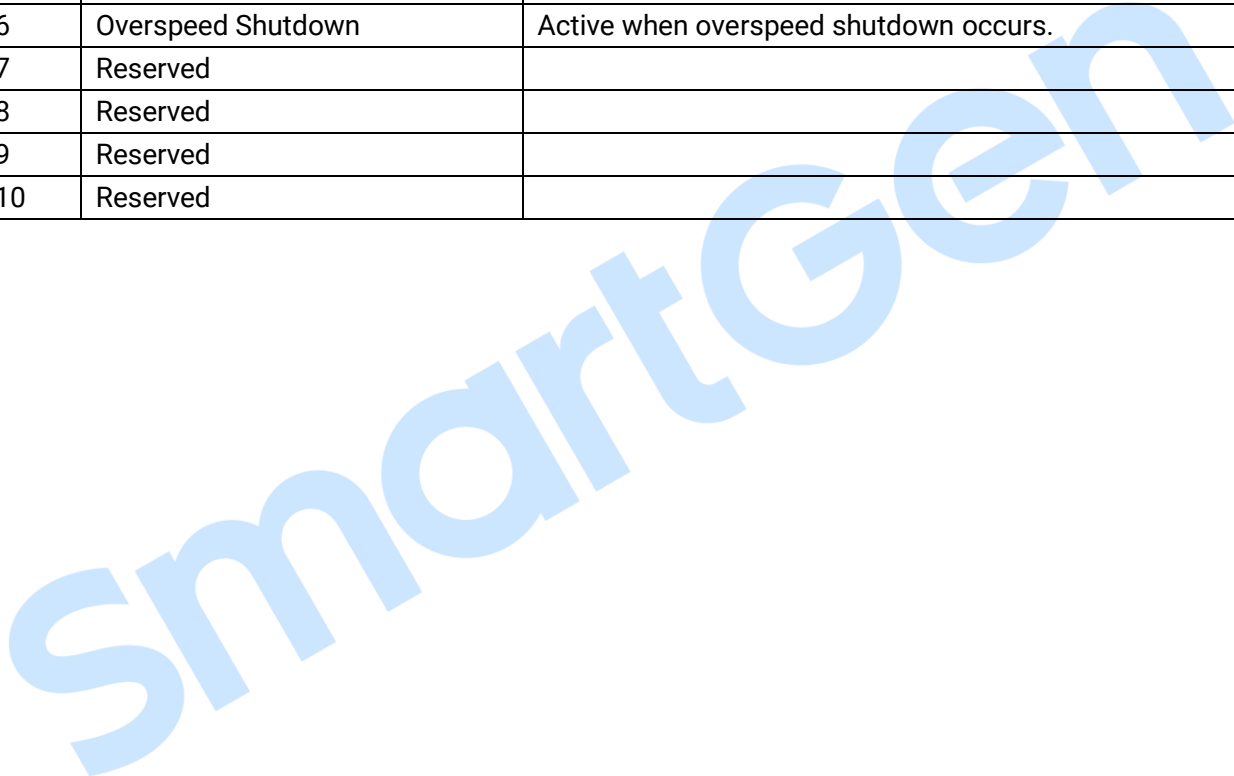

8 TERMINAL CONNECTIONS

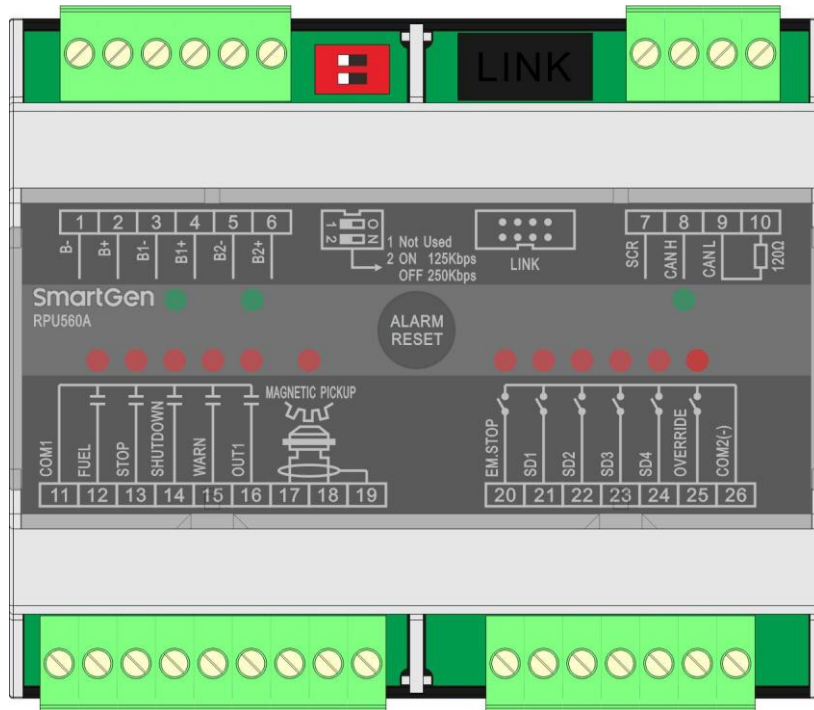


Fig.1 Terminal Description Drawing

Table 8 Terminal Description

Terminal	Function	Cable Size	Description
1.	B-	2.5mm ²	Power supply negative input.
2.	B+	2.5mm ²	Power supply positive input.
3.	B1-	2.5mm ²	1# power supply negative input.
4.	B1+	2.5mm ²	1# power supply positive output
5.	B2-	2.5mm ²	2# power supply negative input.
6.	B2+	2.5mm ²	2# power supply positive input.
7.	SCR (CANBUS)	0.5mm ²	Connect HMC9000/HMC6000 CANBUS port. Impedance-120Ω shielded wire with its one end connected to SCR is recommended.
8.	CAN(H) (CANBUS)	0.5mm ²	
9.	CAN(L) (CANBUS)	0.5mm ²	
10.	120Ω	0.5mm ²	
11.	COM1	2.5mm ²	Common output port
12.	FUEL	1.0mm ²	Output as working indication when the module detects engine speed exceeded preset "fuel output speed", deactivate when shutdown, and possess break wire detection function.
13.	STOP	1.0mm ²	Output when the module detects a warning alarm, connect to shutdown electromagnet, and possess break wire detection function.
14.	SHUTDOWN	1.0mm ²	Output when the module detects a warning alarm,

Terminal	Function	Cable Size	Description
			alarm status will be locked to save, and it can be reset by pressing reset button.
15.	WARN	1.0mm ²	Output when the module detects a warning alarm, the status will not be locked to save.
16.	OUT1	1.0mm ²	It can be configured by users; output after it is energized.
17.	MAGNETIC PICKUP	0.5mm ²	Speed sensor input with break wire detection function.
18.		0.5mm ²	
19.		0.5mm ²	
20.	EM.STOP	0.5mm ²	Emergency shutdown input port (connect to COM2(-) to activate) NOTE: Break wire detection function can be configured; it needs to connect COM2(-) port with a 10kΩ resistance.
21.	SD1	0.5mm ²	Failure shutdown input port (connect to COM2(-) to activate); It can control engine to stop when it is active. NOTE: Break wire detection function can be configured; it needs to connect COM2(-) port with a 10kΩ resistance.
22.	SD2	0.5mm ²	
23.	SD3	0.5mm ²	
24.	SD4	0.5mm ²	
25.	OVERRIDE	0.5mm ²	Override mode (connect to COM2(-) to activate); In this mode, only Emergency shutdown and Over speed shutdown can stop the engine in case of main controller deactivate.
26.	COM2(-)	0.5mm ²	Common input port.
	ALARM RESET		Pressing this button can reset the alarm.
NOTE: When the communication of CAN and HMC9000/HMC6000 is normal, then CAN indicator will blink, otherwise it will be distinguished.			

9 SYSTEM CONNECTION DIAGRAM

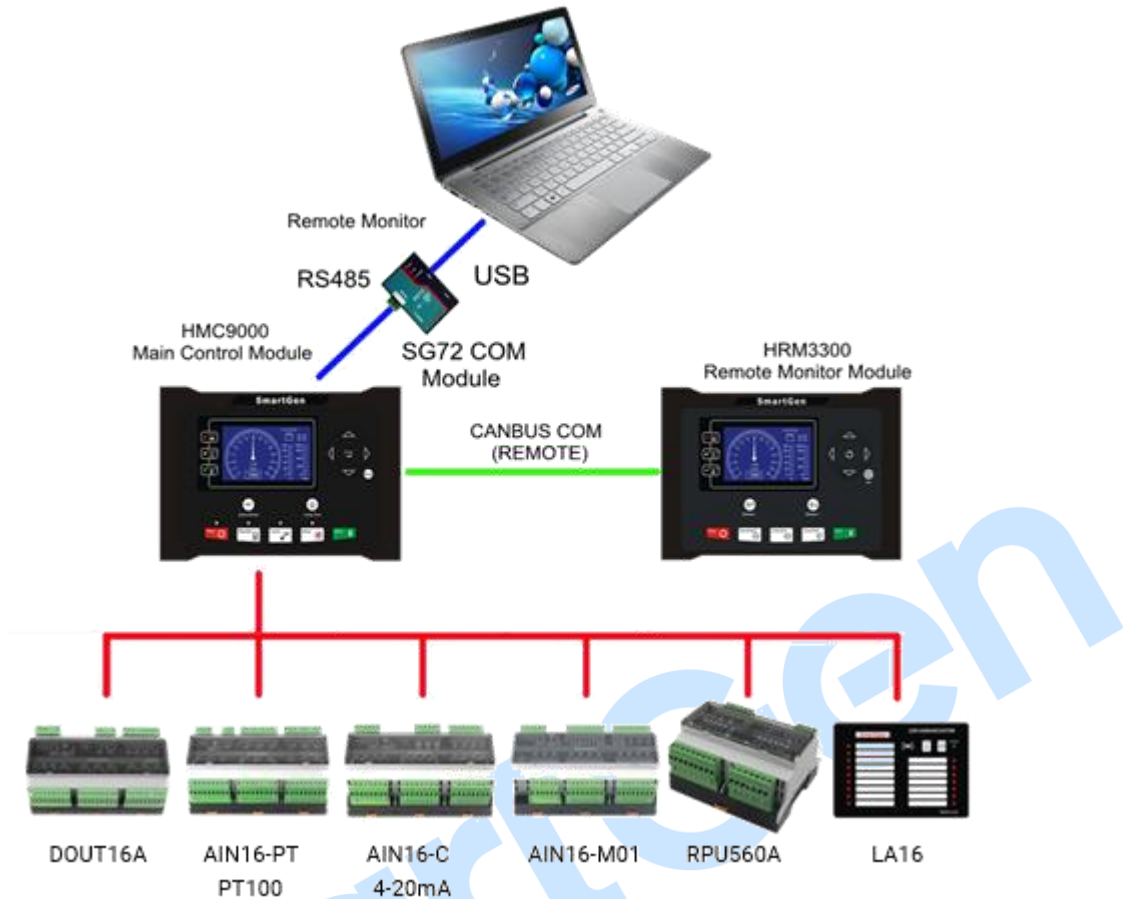


Fig.2 System Connection Diagram

10 APPLICATION DIAGRAM

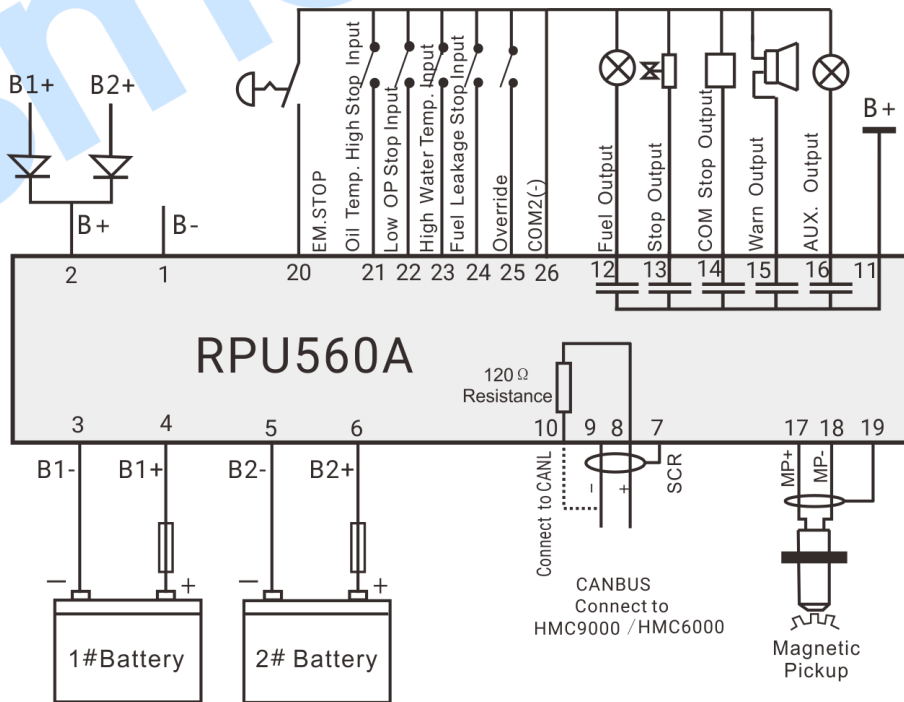


Fig.3 Typical Application Diagram

11 INSTALLATION

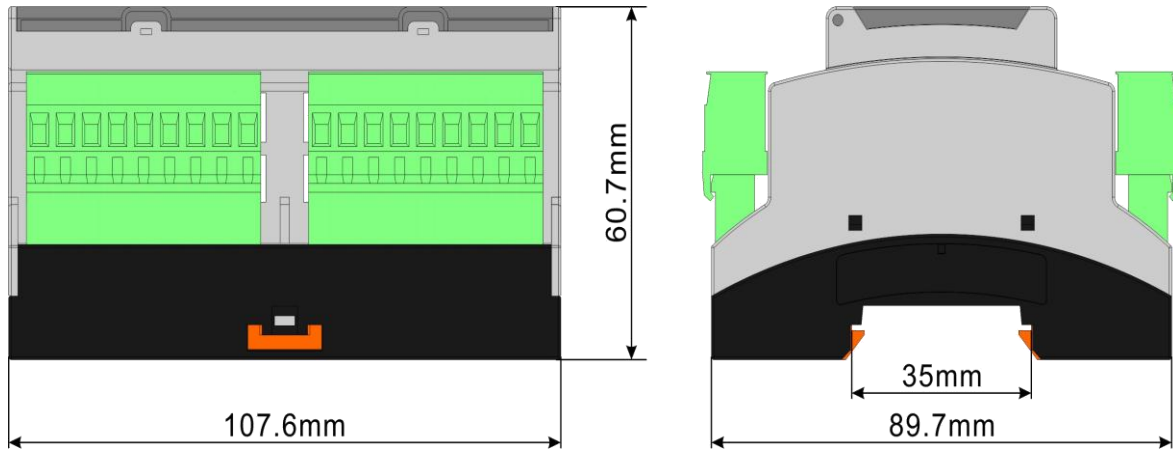


Fig.4 Case Dimensions

12 TROUBLESHOOTING

Table 9 Troubleshooting

Problem	Possible Solution
Controller no response with power.	Check start batteries; Check controller connection wirings;
CANBUS communication failure	Check if CANBUS wires are connected in the opposite way; Check if 120Ω resistance is connected; Check if Baud rate of the dial switch is correct.