

SG485-3

INTERFACE EXPANSION MODULE

USER MANUAL





SmartGen

SmartGen 众智Chinese trademark

SmartGenEnglish trademark

SmartGen – make your generator *smart*

SmartGen Technology Co., Ltd.

No.28 Jinsuo Road, Zhengzhou, Henan Province, China Tel: +86-371-67988888/67981888/67992951 +86-371-67981000(overseas) Fax: +86-371-67992952 Email: <u>sales@smartgen.cn</u> Web: <u>www.smartgen.com.cn</u> www.smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to Smartgen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies.

SmartGen Technology reserves the right to change the contents of this document without prior notice.

Date Version		Note			
2021-06-08	1.0	Original release.			
2021-07-19	1.1	Update pictures in the manual.			
2021-11-06	1.2	Update pictures in the manual.			
2022-09-17	1.3	Update the Logo of SmartGen.			

Table 1 Software Version



CONTENTS

4
4
4
5
6
7



SmartGen

1 OVERVIEW

SG485-3 is the expansion module of RS485 interface, which has 3 interfaces, namely RS485 host interface, RS485 slave 1 interface, RS485 slave 2 interface. It can convert 1# RS485 interface to 2# RS485 interface, providing convenience for customers to monitor and collect data via Modbus-RTU protocol.

2 PERFORMANCE AND CHARACTERISTICS

Its main characteristics are as follows:

- With 32-bit ARM SCM, high hardware integration, improved reliability;
- DC(8~35)V continuous power supply;
- 35mm guide rail installation method;
- Modular design and pluggable connection terminals; compact structure with easy mounting.

3 SPECIFICATION

Items	Contents						
Working Voltage	DC(8~35)V						
	Baud rate: 9600bps, max. communication distance can reach						
RS485 Interface	1,000m when 120Ω shielded twisted pair line is applied.						
K3485 Interface	Stop bit: 1-bit						
	Parity bit: None						
Case Dimension	71.6mmx92.7mmx60.7mm (LxWxH)						
Working Temperature	(-40~+70)°C						
Working Humidity	(20~93)%RH						
Storage Temperature	(-40~+80)°C						
Protection Level	IP20						
Weight	0.14kg						

Table 2 Performance Parameters



4 WIRING

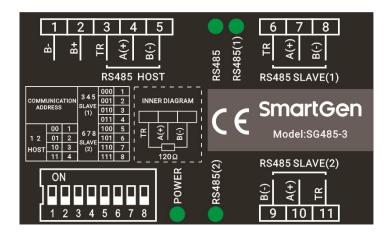


Fig.1 Mask Diagram

Table 3 Indicators Description

No.	Indicator	Description				
1.	POWER	Power indicator, always on when powered on.				
0 00405		RS485 HOST communication indicator, it flashes 100ms when				
2.	RS485	sending or receiving data.				
2	DC 405(1)	RS485 SLAVE(1) communication indicator, it flashes 100ms when				
3.	RS485(1)	sending or receiving data.				
4.	RS485(2)	RS485 SLAVE(2) communication indicator, it flashes 100ms when				
		sending or receiving data.				

Table 4 Wiring Terminals Description

No.	Fund	ction	Cable Size	Remark					
1.	B-		1.0mm ²	DC power negative.					
2.	В+		1.0mm ²	DC power positive.					
3.		TR		RS485 host interface communicates with					
4.	RS485	A(+)	0.5mm ²	controller, TR can be short connected with A(+),					
5.	HOST	В(-)	0.511111	which is equivalent to connecting 120Ω matching resistor between A(+) and B(-).					
6.		TR		RS485 slave interface communicates with PC					
7.	RS485	A(+)	0.5mm ²	monitoring interface, TR can be short connected					
8.	SLAVE(1)	В(-)	0.511111	with A(+), which is equivalent to connecting 120Ω matching resistor between A(+) and B(-).					
9.		B(-)		RS485 slave interface communicates with PC					
10.	SLAVE(2)	A(+)	0.5mm ²	monitoring interface, TR can be short connected					
11.		TR	- 0.0000	with A(+), which is equivalent to connecting 120Ω matching resistor between A(+) and B(-).					



Communication Address Setting								
Address	Host A	Slave 1 Address			Slave 2 Address			
Dial Switch No.	1	2	3	4	5	6	7	8
Corresponding relation between dial switch combination and communication address	00:1		000:1			000:1		
	01:2		001:2			001:2		
	10:3		010:3			010:3		
	11:4		011:4			011:4		
	/		100:5			100:5		
	/		101:6			101:6		
	/		110:7			110:7		
	/		111:8			111:8		

Table 5 Communication Address Setting

5 ELECTRICAL CONNECTION DIAGRAM

This module is applied for the expansion of RS485 interface, which can convert 1# RS485 interface to 2# RS485 interface. Common connection examples are as follows:

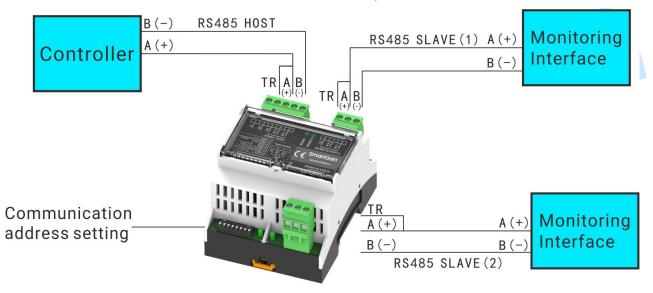


Fig.2 Electrical Connection Diagram



6 OVERALL DIMENSION AND INSTALLATION

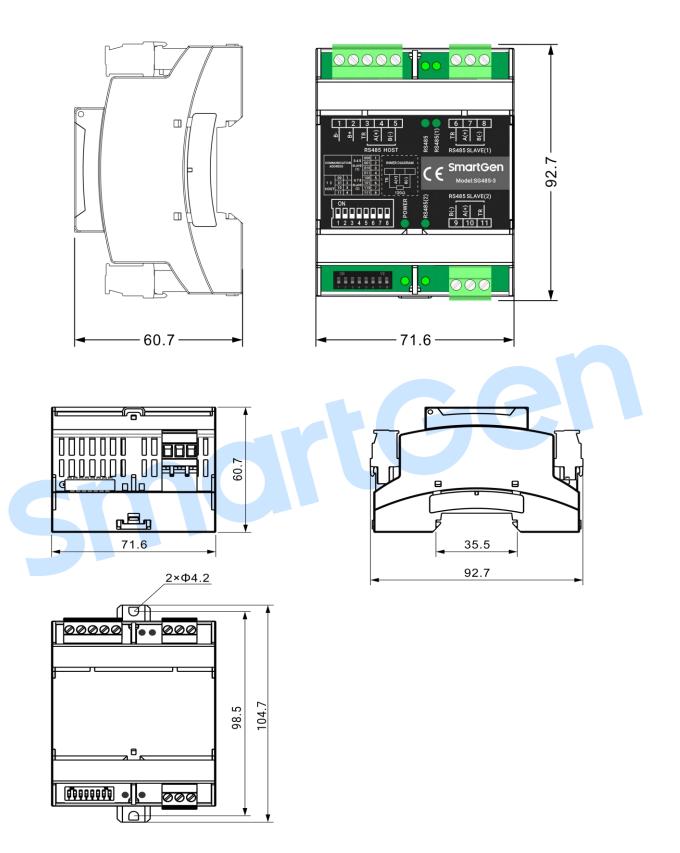


Fig.3 Overall Dimension and Installation (Unit: mm)